Hisense®

COLOR PLASMA DISPLAY TV

USER'S MANUAL

TA42P40M

Part No: IES030928

English

WELCOME TO THE BRIGHT AND VIVID WORLD OF HISENSE PLASMA TV

Dear customer,

Thank you for purchasing this Plasma Display TV. We wish you many years of viewing pleasure. The goal of this manual is to guide you through setting up and operating your TV as quickly as possible.

Please read all the safety and operating instructions carefully before you begin.

SAFETY CLASS

This is an IEC safety class I product and must be grounded for safety.

CONTENTS

Important safety instructions 1
Brief operating instructions 3
Learning about your new TV 5
Selecting a location for the TV 6
Connecting your TV 6
- Connecting to A / V equipments 6
- Connecting to a computer 7
- Connecting to an antenna 7
- Connecting to a cable converter box 8

Using the remote control 9
- Preparing the remote control for use 9
- Learning about the remote control 10

Using the TV features 11
- Understanding the TV features 11
- Basic operations 11
- Using the PRESET menu 13
- Using the PICTURE menu 13
- Using the SOUND menu 14
- Using the CLOCKSETUP menu 14
- Using the FUNCTION menu 14
- Using the CCD/VCHIP menu 16

Appendix 18
- Cleaning and care 18
- Troubleshooting 19
- Specifications 20
- Limited Warranty 21

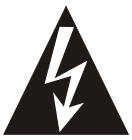

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK).NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the TV.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the users authority to operate this equipment.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

1. **READ THESE INSTRUCTIONS**

2. **KEEP THESE INSTRUCTIONS**

3. **HEED ALL WARNINGS**

4. **FOLLOW ALL INSTRUCTIONS**

5. **DO NOT USE THIS APPARATUS NEAR WATER**
   Do not use this TV near water. For example, do not use near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like. The Plasma Monitor shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the Plasma Monitor.

6. **CLEAN ONLY WITH DRY CLOTH**
   Unplug the TV from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

7. **DO NOT BLOCK ANY VENTILATION OPENINGS. INSTALL IN ACCORDANCE WITH THE MANUFACTURER S INSTRUCTIONS.**
   Slots and openings in the cabinet back or bottom are provided for ventilation, to ensure reliable operation of the TV and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the TV on a bed, sofa, rug, or other similar surface. This TV should never be placed near or over a radiator or heat resource. This TV should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. **DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDE AMPLIFIERS) THAT PRODUCE HEAT.**

9. **DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG. A POLARIZED PLUG HAS TWO BLADES WITH ONE WIDER THAN THE OTHER. A GROUNDING TYPE PLUG HAS TWO BLADES AND A THIRD GROUNDING PRONG. THE WIDE BLADE OR THE THIRD PRONG ARE PROVIDED FOR YOUR SAFETY. IF THE PROVIDED PLUG DOES NOT FIT INTO YOUR OUTLET, CONSULT AN ELECTRICIAN FOR REPLACEMENT OF THE OBSOLETE OUTLET.**

IMPORTANT SAFETY INSTRUCTIONS

10. PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.

11. ONLY USE ATTACHMENTS/ACCESSORIES SPECIFIED BY THE MANUFACTURER.

12. USE ONLY WITH CART, STAND, TRIPOD, BRACKET, OR TABLE SPECIFIED BY THE MANUFACTURER, OR SOLD WITH THE APPARATUS. WHEN A CART IS USED, USE CAUTION WHEN MOVING THE CART/APPARATUS COMBINATION TO AVOID INJURY FROM TIP-OVER.

Do not place this TV on an unstable cart, stand, tripod, bracket, or table. The TV may fall, causing serious injury to someone, and serious damage to the appliance. An TV and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the TV and cart combination to overturn.

S3125A

13. UNPLUG THIS APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.

For added Protection for this TV receiver during a lightning storm, or when it is left unattended and unused for long period of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV due to lightning and power line surges.

14. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL. SERVICING IS REQUIRED WHEN THE APPARATUS HAS BEEN DAMAGED IN ANY WAY, SUCH AS POWER-SUPPLY CORD OR PLUG IS DAMAGED, LIQUID HAS BEEN SPILLED OR OBJECTS HAVE FALLEN INTO THE APPARATUS, THE APPARATUS HAS BEEN EXPOSED TO RAIN OR MOISTURE, DOES NOT OPERATE NORMALLY, OR HAS BEEN DROPPED.

15. Wet Location Marking - CANADA

Worded:" The Plasma Monitor shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the Plasma Monitor."

Brief Operating Instructions

1.Connection

Connect the antenna lead or CATV cable or external equipments(such as Antenna, Cable TV ,VCD,DVD, VTR,Set top box,etc.)to the corresponding terminals or interface on the TV rear(please refer to the owner.s manual of the equipment to be connected as well)and confirm that the signal source is available and works normally.

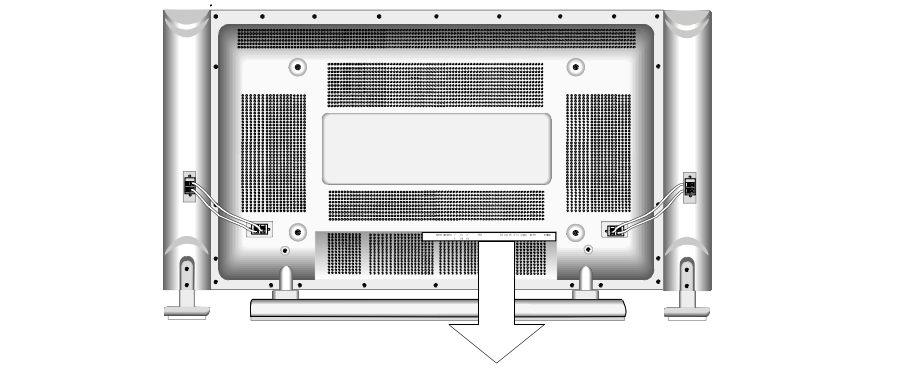

2.The remote control

Open the back battery cover on the remote control and install two AAA size batteries and then close the battery cover.

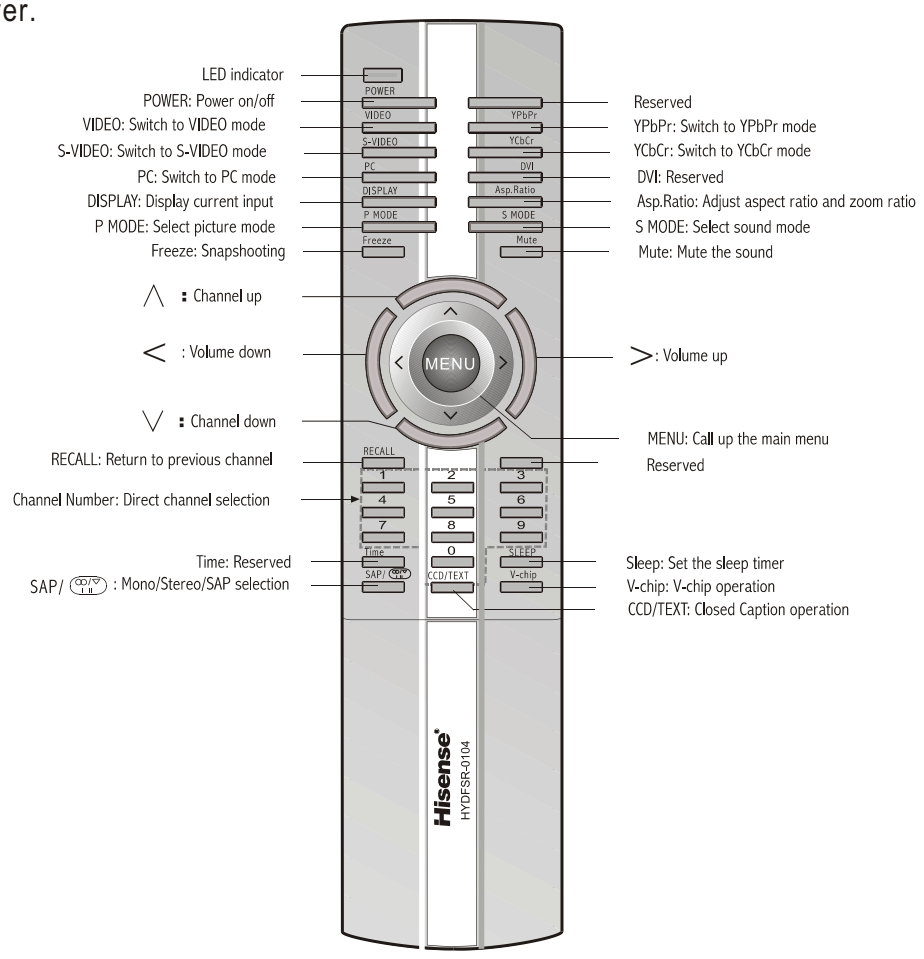

Brief Operating Instructions

3.Switching on/off

1)Connect the TV to power outlet, the power indicator will flicker and then turn blue. About 10 seconds later, TV picture will display on the screen.
2)Press the power switch or the [**POWER]** button on the remote control to turn off the TV.

4.Signal source selection

Press the number [1-9] button or [∧ ∨] button to select TV input; press the [VIDEO] button to select VIDEO input; press the [S-VIDEO] button to select S-VIDEO input; press the [YCbCr] button to select YCbCr input; press the [YPbPr] button to select YPbPr input; press the [PC] button to select PC input.

5.Air/Cable selection

You can select the signal receiving method according to the following steps:
1) Press the [MENU] button to enter the main menu.
2) Press the [∧or∨] button to select the item PRESET, and press the [>] to enter PRESET menu.
3) Press the[∧or∨] button to select the item RF INPUT.
4) Press the [< or >] button to change the item from among Air, CATV(STD),CATV(HRC) and CATV(IRC).

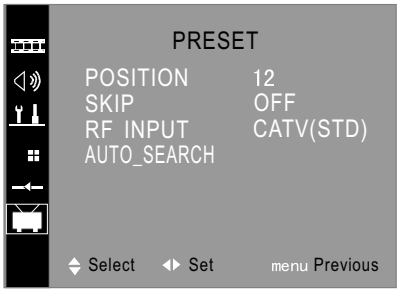

6.Channel search

1) Press the [MENU] button to enter the main menu.
2) Press the [∧or∨] button to select the item PRESET, and press the [>] to enter PRESET menu.
3) Press the [∧or∨] button to select the item Auto-search.
3) Press the [< or >] button to start auto-searching.

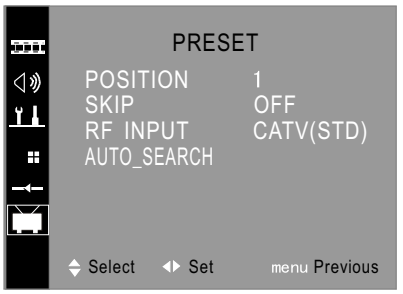

7.Picture adjustment

1) Press the [MENU] button to enter the main menu.
2) Press the [∧or∨] button to select the item Picture, and press the [>] to enter Picture menu.
3) Press the [∧or∨] button to select the item you want to adjust.
4) Press the [< or >] button to adjust the level.

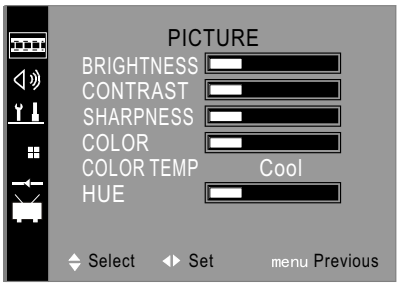

8.Sound adjustment

1) Press the [MENU] button to enter the main menu.
2) Press the [∧or∨] button to select the item Sound, and press the [>] to enter Sound menu.
3) Press the [∧or∨] button to select the item you want to adjust.
4) Press the [< or >] button to adjust the level.

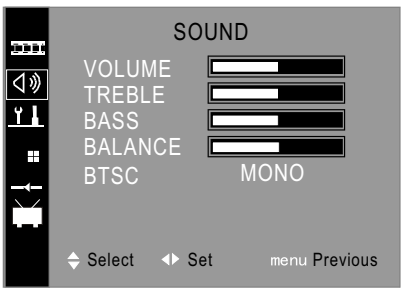

Note: All buttons mentioned above are on the remote control unless indicated otherwise.

Learning about your new TV

You can operate your TV by using the buttons on the front panel or the remote control. The terminals on the back panel provide all the connections you will need to connect other equipment to your TV.

Front Controls

Back Connections

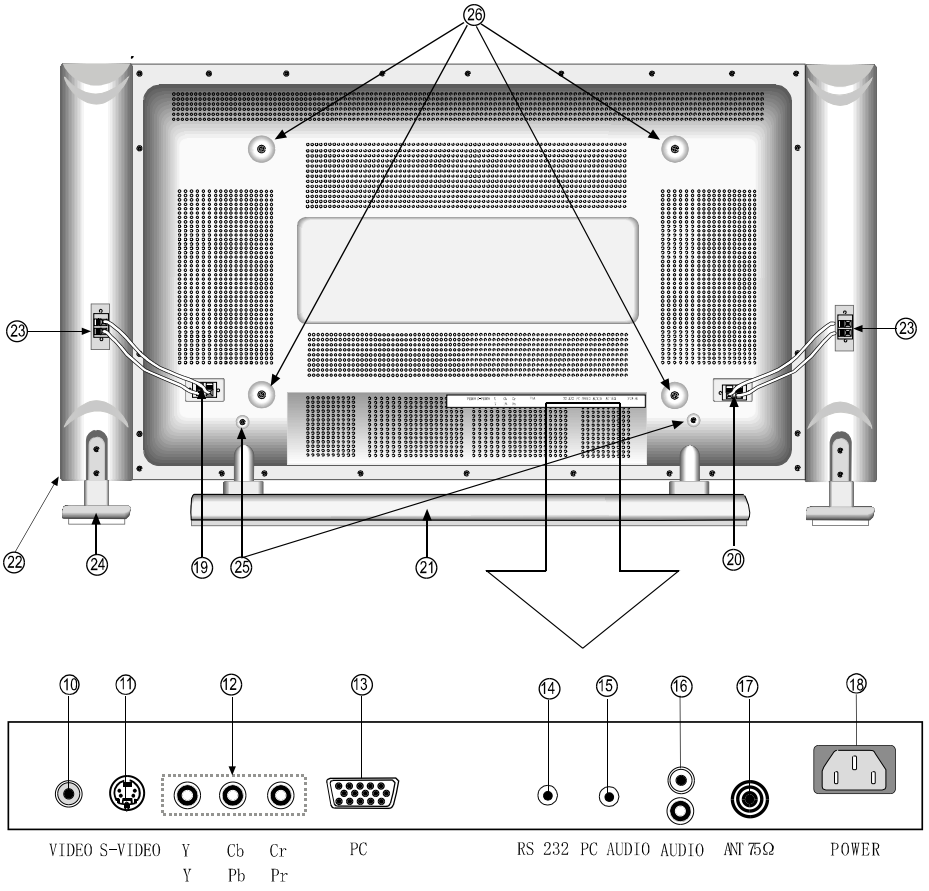

Note: The above figures are for reference only, please refer to the actual units to determine their appearance.